


## **Assembly Instructions**

**Avonlea End Table** 


**Tools Needed:** hammer, 7/16" wrench, #2 square bit screw driver or power driver, punch No drilling is required. All the necessary holes are predrilled. Bolts fit snugly in the holes. You may need to use a hammer to drive the bolts through the holes.



## **Parts**

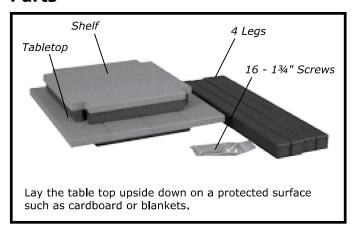

## Step 1 — Install Legs

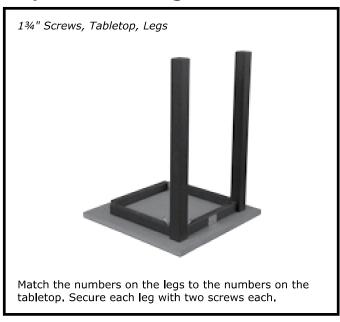

## Step 2 — Install Bottom Shelf



